


Taittokannake 10207020
Asennusohje




B1 : M6 x 40mm ruuvit x 8 pc



B2 : M5 x 40mm ruuvit x 2 pc




C : M5 x 20mm ruuvit x 6 pc

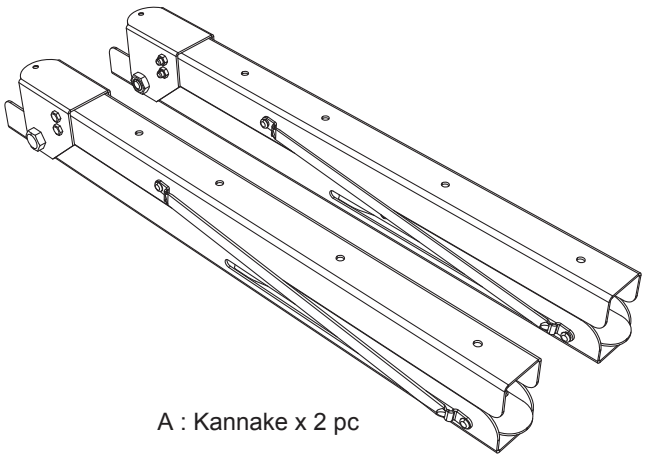


A : Kannake x 2 pc


Etsi seinästä koolauksen kohta tai muu luja kohta. Avaa kannake ja merkitse ruuvien paikat. Varmista vatupassin tai mitan avulla että ruuvien paikat tulevat pystysuoraan.

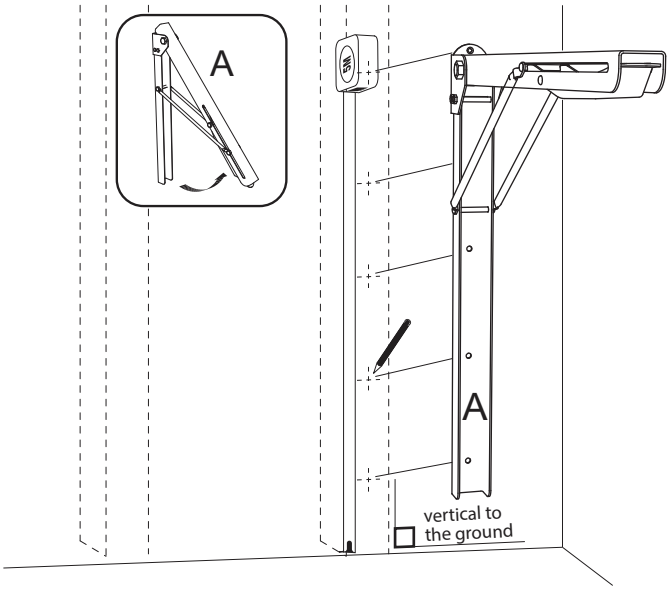


Käytä ruuveja (B1,B2) kiinnitykseen kuvan osoittamalla tavalla. Varmista vatupassilla että kannakepari tulee vaakasuoraan.
Huom. Betoni- tai kiviseinään kiinnityksessä käytä sopivia tulppia.

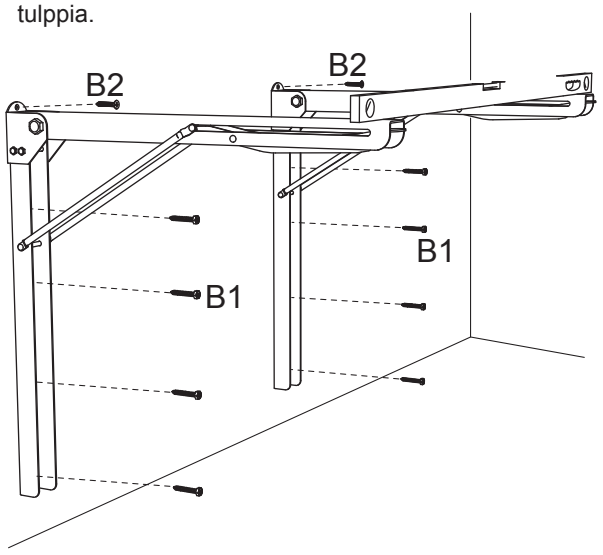


Käytä ruuveja (C) kiinnittääksesi tason kannakkeisiin.

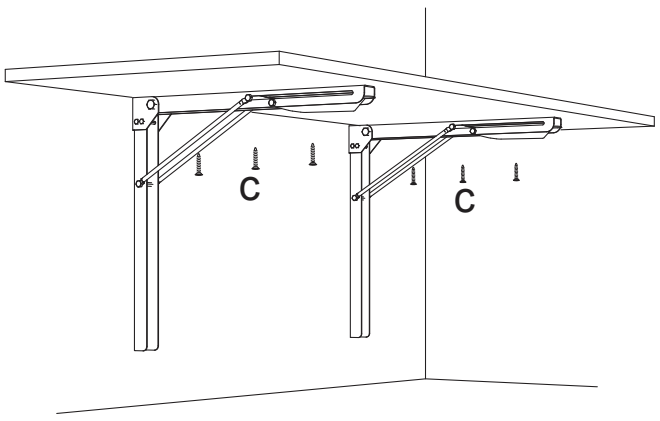


Kun haluat laskea tason alas, paina kannakkeen päissä olevia vipuja.

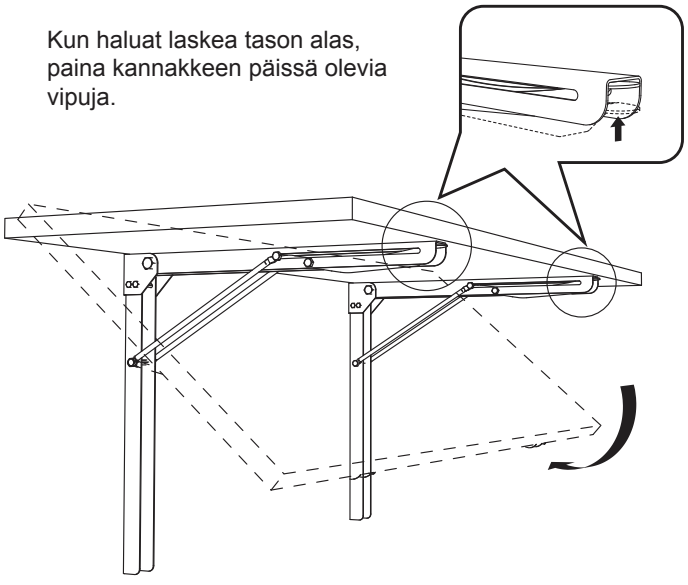


PARTS LIST

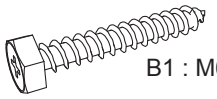


B1 : M6 x 40mm screws x 8 pc

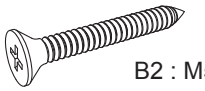

B2 : M5 x 40mm screws x 2 pc

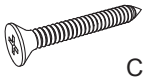


C : M5 x 20mm screws x 6 pc

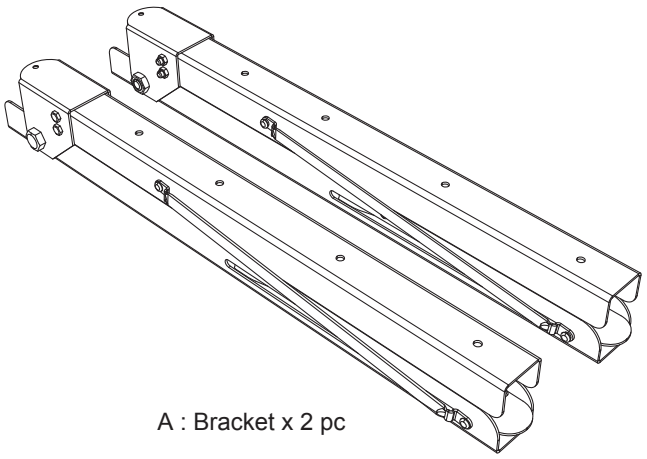


A : Bracket x 2 pc


Find stud in the wall. Open bracket and mark the four hole locations. All the holes must be kept vertical to the ground.

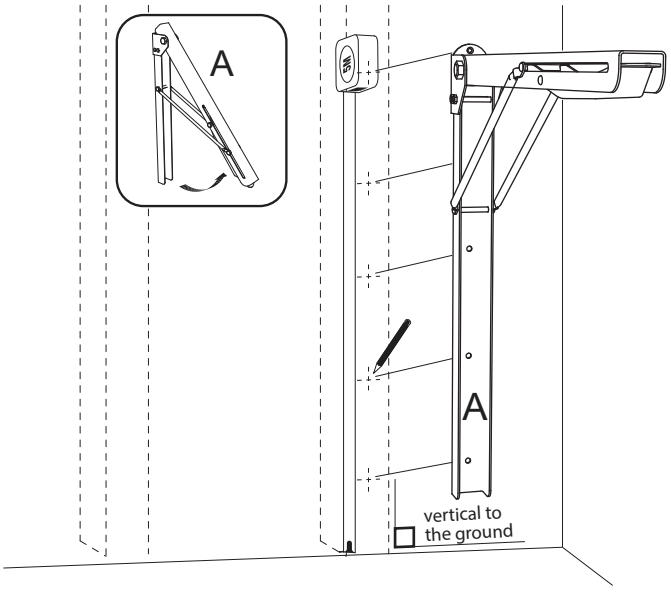

Use screw (B1,B2) to fasten the bracket on the wall.

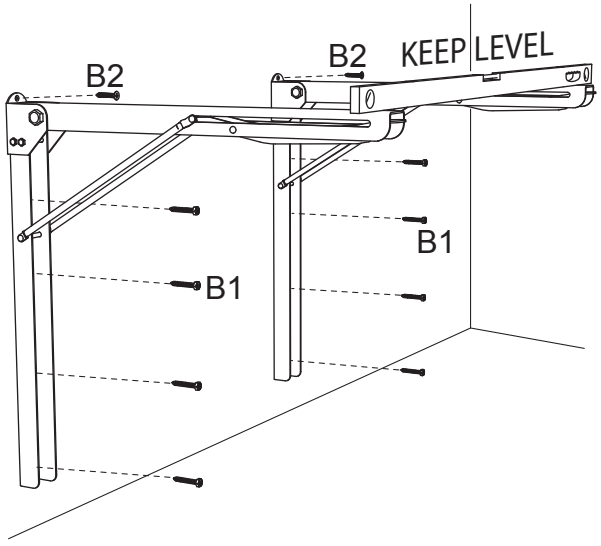

Use screw (C) to fasten the bracket to table top.

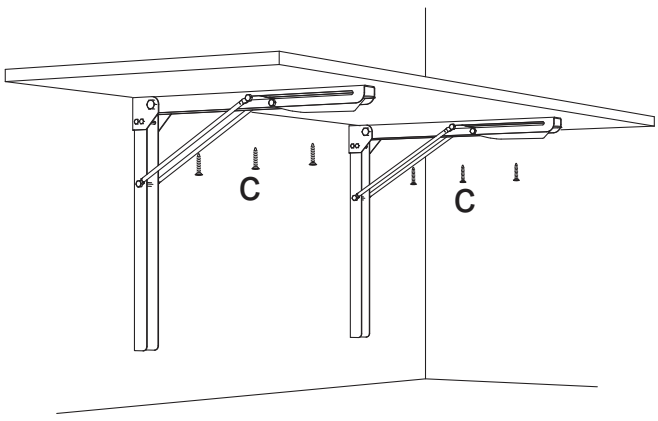

When not in use, gently press the handle on bracket, to allow the table to fold down.

